

TTP = Tightness test pressures

NG: 20–21 mbar

LPG/air: Where operating pressure is 14 mbar, TTP is 13–14 mbar.

LPG/air: Where operating pressure is 21 mbar, TTP is 20–21 mbar.

LPG: Where operating pressure is 28 mbar, TTP is 20–21 mbar (with regulator) or 27–28 mbar.

LPG: Where operating pressure is 30 mbar, TTP is 28–29 mbar (with regulator) or 29–30 mbar.

LPG: Where operating pressure is 37 mbar, TTP is 30–31 mbar (with regulator) or 36–37 mbar.

